

ENG / SLO / CRO



GREED V2

GREED V2 MINI

Box Contents

1. UVI Greed V2 / UVI Greed V2 Mini Mechanical RGB Keyboard
2. User Manual



User Manual



Navodila za uporabo



Korisnički priručnik

Instructions / Navodila / Upute

Instructions


Thank you for purchasing UVI Greed V2 keyboard. UVI Greed V2 is a “plug and play” keyboard with Mechanical MX Brown silent switches. You do not need any drivers.

Navodila

Zahvaljujemo se vam za nakup tipkovnice UVI Greed V2. UVI Greed V2 je “plug and play” tipkovnica z mehanskimi MX Brown silent stikali. Za uporabo ne potrebujete gonilnikov.

Upute


Hvala vam što ste kupili UVI Greed V2 tipkovnicu. UVI Greed V2 je “plug and play” tipkovnica s mehaničkim MX Brown silent prekidačima. Za upotrebu vam nisu potrebni nikakvi upravljački programi.

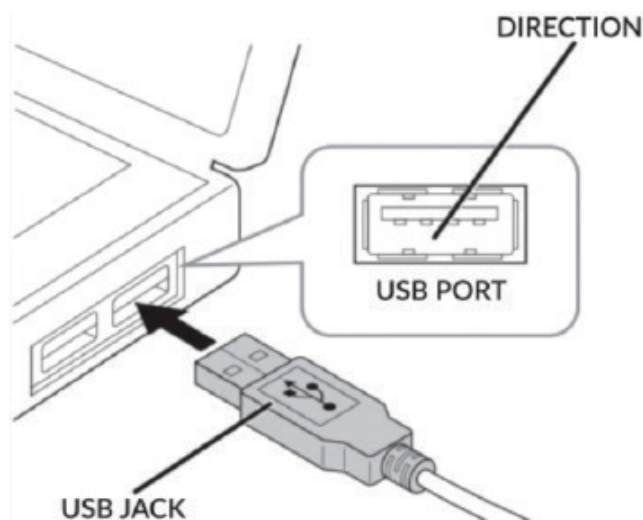


Game mode / Igralni način / Igrački način



Lighting modes / Načini osvetlitve / Načini rasvjete

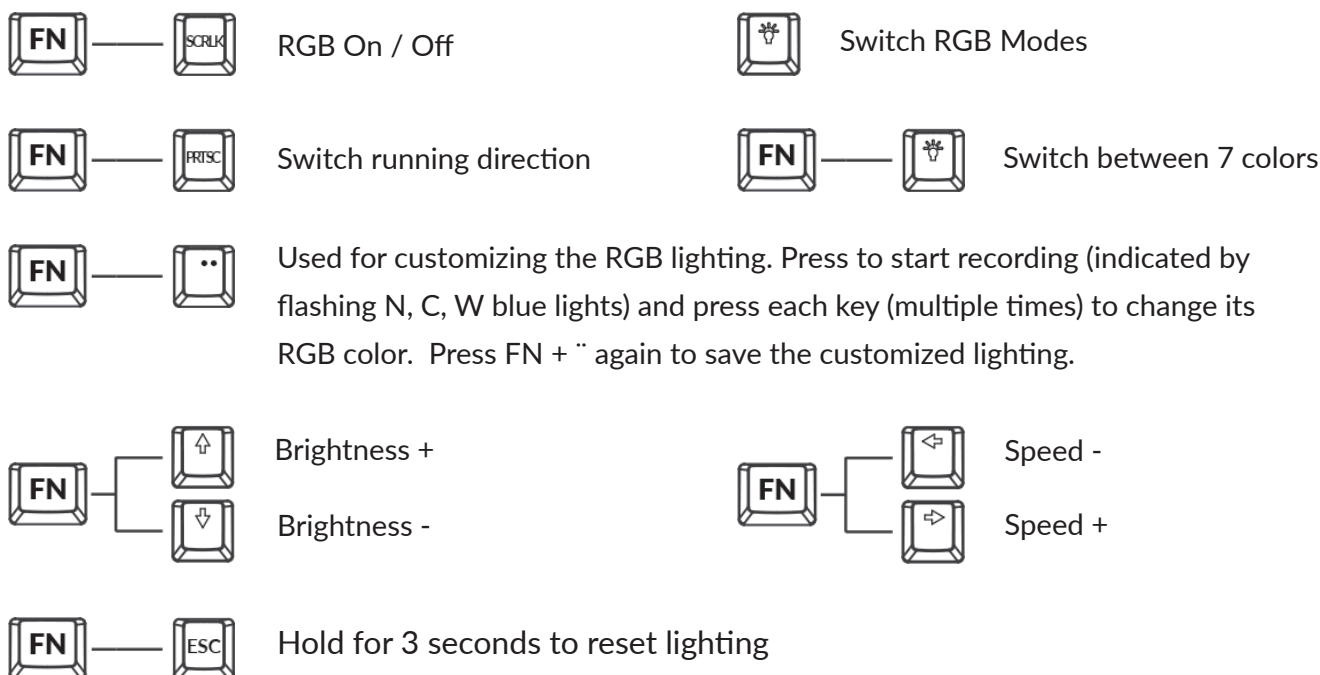

Multimedia / Multimedija / Multimedija

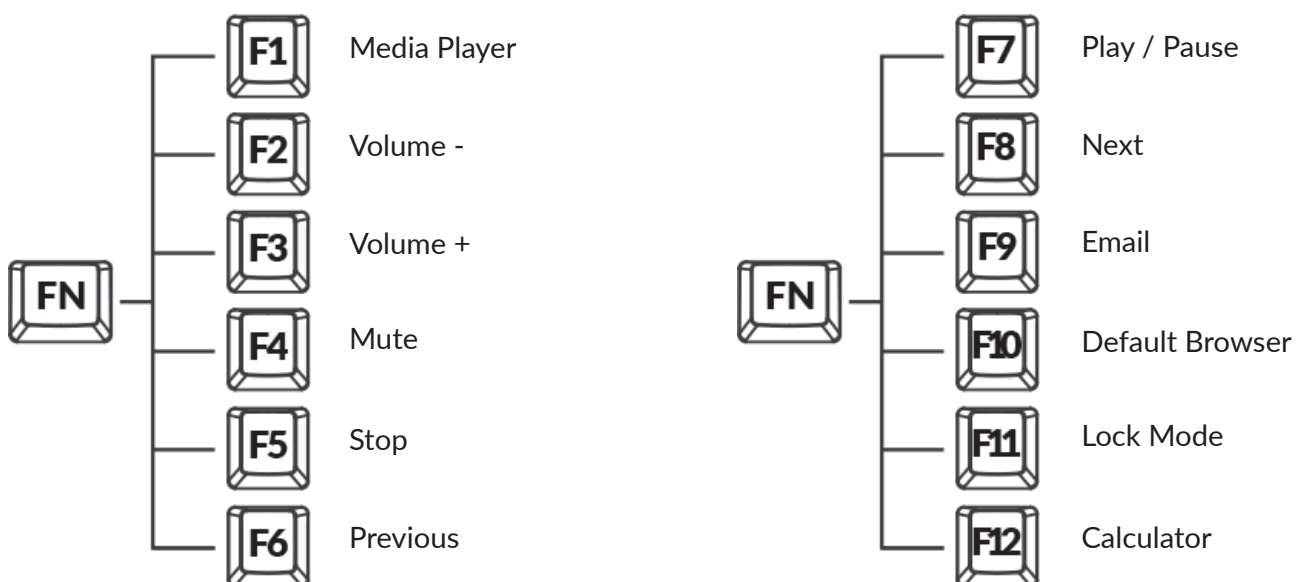

Specifications / Specifikacije / Tehnički podaci

Technical specifications

Number of keys: 104 (Full), 88 (Mini)
Size: 435 × 127 × 32 mm (Full)
355 × 127 × 32 mm (Mini)

Switch type: Mechanical
Lifetime: 50 million clicks

All keys Anti-ghosting
Replaceable switches

Tehnične specifikacije

Število tipk: 104 (Full), 88 (Mini)
Dimenzije: 435 × 127 × 32 mm (Full)
355 × 127 × 32 mm (Mini)

Tip stikala: Mehansko
Življ. doba: 50 mil. klikov

Anti-ghosting za vse tipke
Zamenljiva stikala

Tehnički podaci

Broj tipki: 104 (Full), 88 (Mini)
Dimenzije: 435 × 127 × 32 mm (Full)
355 × 127 × 32 mm (Mini)

Vrsta prekidača: Mehanički
Vijek traj.: 50 milijuna klikova

Anti-ghosting za sve tipke
Zamjenjivi prekidači

Warning / Opozorilo / Opomena

Warning

Do not attempt to open, service or modify the keyboard. Clean the keyboard using only a dry cloth; do not use alcohol or detergent. Keep away from water or fire and do not expose to high temperatures.

Opozorilo

Tipkovnice ne poskušajte odpirati, popravljati ali modificirati. Tipkovnico čistite samo z uporabo suhe krpe; ne uporabljajte alkohola ali detergenta. Izogibajte se stiku z vodo in odprtim ognjem ter je ne izpostavljajte visokim temperaturam.

Opomena

Ne pokušavajte otvarati, popravljati ili modificirati tipkovnice. Čistite tipkovnicu samo suhom krpom; ne koristite alkohol ili deterdžent. Izbjegavajte kontakt s vodom ili otvorenim plamenom i ne izlažite visokim temperaturama.

 **Thank you for choosing UVI Greed V2.**